


Step by step guide to resetting the 'boil dry' function

As part of the safety features that come with the Fine-T machine, there is a boil dry function that is activated if no water is added during the cycle. Not adding water to the machine can be an easy mistake to make, especially with busy lifestyles we have today. This mistake is easily rectified by simply resetting the machine.


1. If you have boiled dry the machine, the most obvious sign is that the power light at the base of the unit will be on. However, the display screen will be blank.
2. Before you can reset the Fine-T machine, you need to make sure that the heating chamber has cooled down. The simplest way to do this is to pour cold water in to the top of heater. Wait for a couple of minutes then follow on with the below instructions. To view the reset button with ease, it is recommended that you empty the water before moving on to the next steps.
3. The reset button is located underneath the heating chamber; to access this you need to open the infusion basket fully (fig 1).
4. You will find the reset button approx a centimetre to the right of the centre valve (fig 2).
5. To reset, simply use a pen or pointed object and press the recessed button (fig 3). The display screen should then light up, the clock appears, then it will read "draining infuser, please wait" (fig 4) and the machine will be ready to use.
6. If in the unlikely occurrence that this does not resolve the problem, please contact our customer service help line on **0151 482 7999** or through our website at **www.fine-t.co.uk/contact-us/**



(Fig 1)

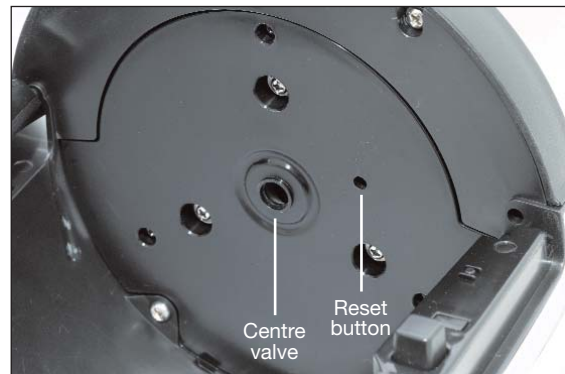

(Fig 2)

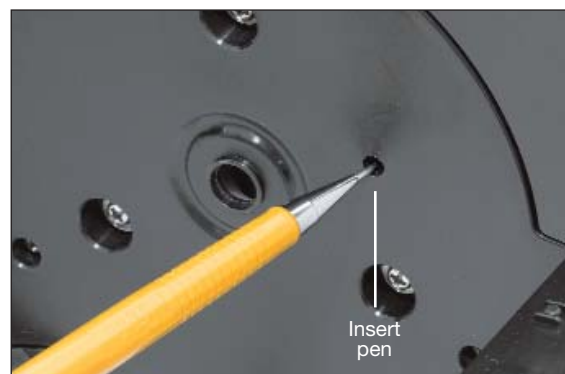

(Fig 3)



(Fig 4)